




Tillbehör

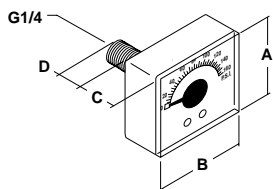


Manometer 18/28 Serien

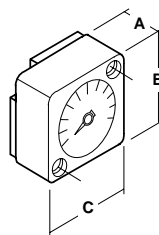


Manometer 08 & 38 Serien

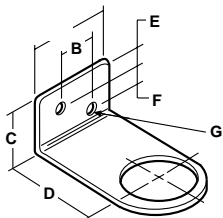

L-fäste GRP-95-147

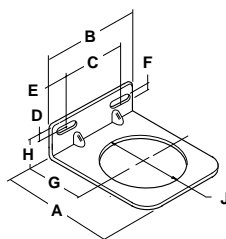

L-fäste GPA-96-606

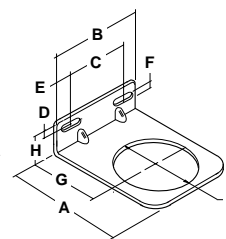

L-fäste GPA-96-607

Dimensioner

Tillbehör	Katalognr.	Passande	mm	A	B	C	D	E	F	G	H	J	K	L
L-fäste	GRP-95-147	R08		38	17	25	44	8,6	7,9	5,6				
	GPA-96-606	R18		69,5	69,5	42	11	14	7,1	40	25	51		
	GPA-96-607	R28		84,5	76	48	11	14	61	49	7,1	25		
Manometer														
0-11 bar	RRP-96-722	R08, R38												
0-4 bar	RRP-96-723	R08, R38		15	27	27								
0-2 bar	RRP-96-724	R08, R38												
0-2,0 bar	RRP-96-667	R18, R28												
0-4,2 bar	RRP-96-668	R18, R28		41	41	26	15							
0-11,2 bar	RRP-96-669	R18, R28												
0-21 bar	RRP-96-670	R18, R28												

Andra tillbehör

Beskrivning	Katalognr.	Passande
Monteringsmutter av aluminium	RPA-96-733	R08
	RRP-96-673	R18
	RRP-96-674	R28

Regulatorer: Utbytesenheter

Modell	Själv-avlufande membran (nitril)	Ej avluftande membran (nitril)	Ventilsats	Plomberings-sats	Monteringsmutter av plast
Regulatorer					
R08	GRP-96-725	GRP-96-726	RRP-96-727	RPA-96-735	RPA-96-734
R18	RRP-96-656	RRP-96-657	RRP-96-658	RRP-96-671	RRP-96-675
R28	RRP-96-682	RRP-96-683	RRP-96-684	RRP-96-672	RRP-96-676
R38	RRP-96-694	—	RRP-96-696	—	—
Modell	Fjäder 0-2,1 bar	Fjäder 0-4,2 bar	Fjäder 0-8,5 bar	Fjäder 0-17 bar	
Regulatorer					
R08	GRP-95-111	GRP-96-718	GRP-96-717	—	
R18	RRP-96-659	RRP-96-660	RRP-96-661	RRP-96-662	
R28	RRP-96-614	RRP-96-615	RRP-96-624	RRP-96-625	
R38	—	—	—	—	